

A. Vertical Column Positioning (FIGURE 6)
See instructions for Raising and Lowering the Center Column.

B. Angular and Horizontal Column Positioning (FIGURES 7 & 8)

Unlock the Center Column by turning the Center Column Locking Knob counter-clockwise. Then raise the Center Column up until it clears the main casting. Unlock the Horizontal Locking Knob by turning counter-clockwise and position the Column at the desired angle. Turn both the Center Column and Horizontal Locking Knobs clockwise to lock.

C. Center Column Panning and Rotation (FIGURE 9)

Unlock the center column Pan Lock Knob to Pan the entire Versatile Column assembly and/or to rotate the Center Column. Re-lock when the desired position is reached.

NOTE: In the horizontal or an angular Column position, it is recommended that you carefully hang your camera bag or other weight on the Center Column Weight Hook at the opposite end of the mounted equipment or camera. This weight will act as a counter balance to help stabilize the Tripod and reduce the chance of it falling over because of unequal weight distribution.

Reversible Center Column (FIGURE 10)

 
In addition to the Versatile movements, your Tripod has the ability to reverse the Center Column.

To reverse the Center Column, loosen the Center Column Locking Knob and pull the Center Column out. Insert the Center Column through the bottom with the Mounting Plate upside-down and retighten the Center Column Locking Knob securely.

NOTE: Do not reverse the Center Column when a camera or equipment is mounted.

Interchangeable Spiked and Rubber Feet (select models) (MAIN FIGURE)

Most Benro tripods include interchangeable Stainless Steel Spiked or Rubber Feet. They provide the right contact depending on the surface or terrain that the tripod will

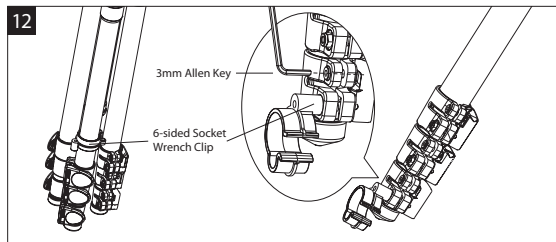

be used in. To remove the Rubber Feet simply unscrew each Rubber Foot counter-clockwise and replace with the provided Spiked Feet. Tighten the Spiked Feet using the included Wrench.

User Adjustments (FIGURES 11 & 12)

Leg Angle Hinge Pivot tension can be adjusted using the 4mm Allen Key. Flip Lock Lever tension is adjusted using the 3mm Allen Key plus the special Six-sided Socket Wrench built into the plastic clip which comes attached to one of the tripod legs.

USER NOTICE

- Do not exceed the maximum specified load capacity (see specifications at www.BenroUSA.com).
- Always ensure that Leg and Head Locks are tightly engaged before mounting any gear on your Tripod.
- Always clean and dry any Tripod after it has been exposed to wet, dusty, sandy or salty conditions. Your Tripod is not recommended for use in salt water. If required, clean tripod using a mild soap solution applied with a soft cloth, rinse with fresh water and dry with soft towel. Remove any dust, dirt or sand from all Leg Locks, Leg Sections and all moving parts.
- Do not leave any Tripod in the sun for prolonged periods and avoid high temperature exposure.
- Avoid leaving any Tripod or Monopod unattended in areas where people could trip over the gear and get hurt.
- Remove camera, lens, and all gear from any tripod when transporting.
- For your safety, don't let your Benro gear come in contact with any electrical power source.

 
BENRO® 75 Virginia Road
North White Plains, NY 10603
T 914.347.3300
F 914.347.3309
info@BenroUSA.com
BenroUSA.com

 
Specifications and design are subject to change without notice.

BENRO®

Operating Instructions

Thank you for making Benro your choice for professional photographic equipment. Your Benro gear is manufactured to provide years of dependable service. In order to obtain optimum satisfaction and performance, we suggest that you carefully read these instructions.

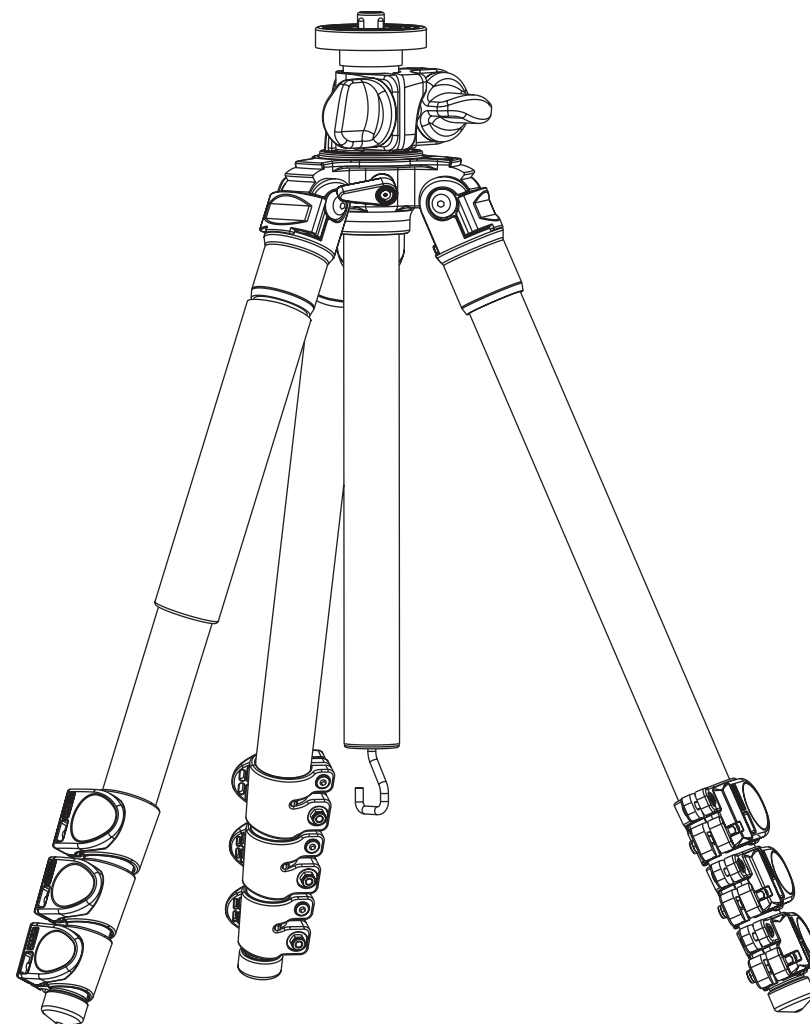

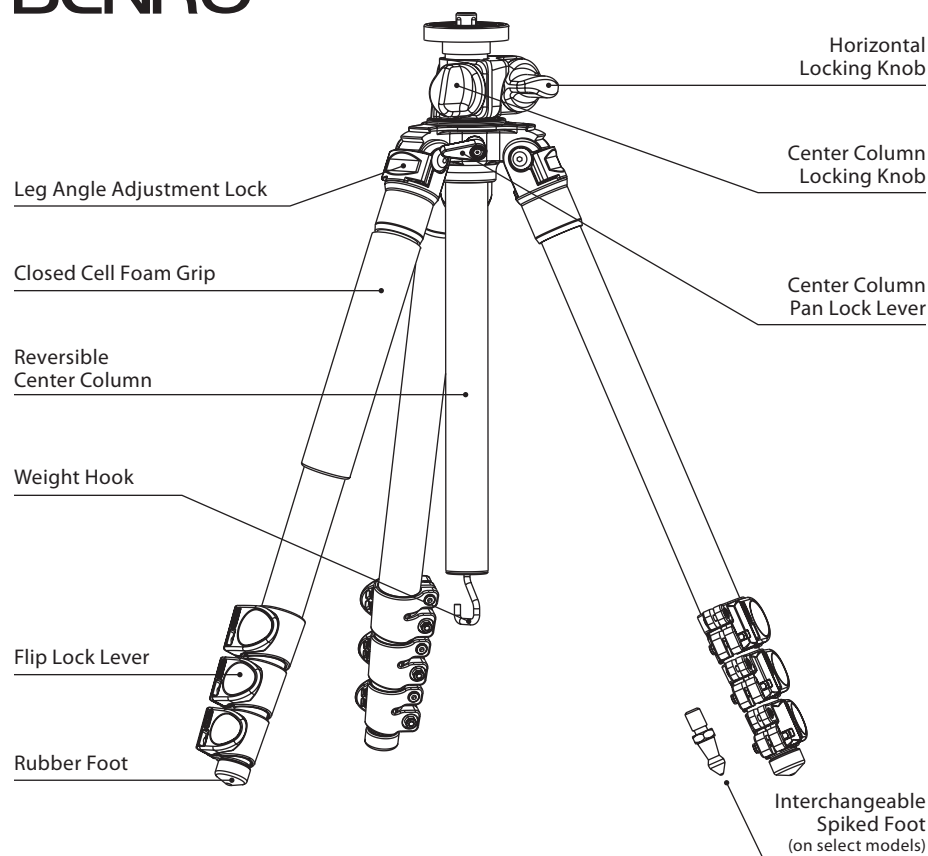

SETUP

Head Mounting (FIGURES 1 & 2)

If your Tripod did not come with a Head, select one of the fine Benro Ballheads or Panheads that match your size Tripod and install by screwing the Head clockwise onto the 3/8" Mounting Thread of the Top Plate. Once it is hand tight, secure by fully tightening the Head Locking Screw(s) (on select models) from below.

Most Heads have a 3/8" base mount so your Benro Tripod is shipped with the 3/8" Mounting Thread exposed, but if the Head you choose uses a 1/4-20 you can attach it by simply reversing the Mounting Screw. To do this turn the Locking Nut counter-clockwise (using the supplied Wrench) until it becomes loose, and unscrew the Mounting Screw until it can be completely removed. Reverse the Screw, so that the threads are in position and screw it back into place, secure with the Locking Nut using the Wrench.

NOTE: Allow enough of the screw threads to be available for maximum security when the Tripod Head is mounted onto the Tripod. It's recommended that at least 5 to 6 threads be exposed before locking the Mounting Screw in place.

OPERATION

Before using your Tripod, adjust each Leg Section to the desired height and Leg Angle Setting.

Make sure that the Tripod is firmly resting on a level surface and mount your camera securely on the Tripod Head. Always engage any safety locks on the Tripod Head to prevent any accidental dismounting.

FOR BEST RESULTS: Do not raise the Tripod higher than necessary and extend the largest diameter Leg Sections first. Only extend the Center Column if required to reach maximum height or to fine-tune the vertical position.

FOR EXTRA STABILITY: Carefully hang your camera bag or other weight on the Weight Hook at the bottom of the Center Column.

NOTE: Never carry your Tripod with camera gear attached.

Leg Angle Adjustment (FIGURE 3)

To accommodate uneven terrain, awkward shooting situations or for low angle shooting, your Benro Tripod includes a 3-position Leg Angle Adjustment Sliding Lock. Each Leg can be adjusted by pulling the Leg Angle Lock out and selecting one of the three positions. Please make sure that the Leg Angle Lock is securely pushed back into the lock position after you have selected the desired Leg Angle.

Leg Section Adjustment (FIGURES 4 & 5)

Each Leg section can be adjusted to the desired length by turning the leg lock grip 1/2 turn (180°) clockwise until the Leg is free to slide in or out. Once the desired length is achieved, turn the Leg Lock Grip counter-clockwise until the Leg Section is securely locked. Repeat this step for each Leg and each Section until the Tripod is set to the desired height.

NOTE: To prevent any accidental damage to your gear, always remove any mounted equipment (camera, etc.) from the Tripod before adjusting the Leg Sections.

Raising and Lowering the Center Column (FIGURE 6)

To raise or lower the Center Column, turn the Center Column Locking Knob clockwise and set the Column to the desired position. While holding the Column in position, turn the Center Column Locking Knob counter-clockwise to secure the Column in place. Don't over-tighten the Center Column Lock, as this could damage the threads.

NOTE: Take special care when raising or lowering the Center Column, if a camera or equipment is mounted on the Tripod. Never loosen the Center Column Locking Knob without holding the Center Column. Failure to follow these instructions could result in damaged equipment.

Multi-Position Versatile Column (FIGURES 6, 7, 8 & 9)

The Versatile Column offers rapid and convenient vertical, angular and horizontal Center Column positioning. The Center Column can be converted from a standard vertical orientation to a horizontal cross bar. In the horizontal position, a mounted camera can have a clear view straight up or down (without the Tripod legs getting in the way), to achieve challenging and creative angles. The Versatile Column is ideal for flat artwork, close-up macro photography and for shoots that require total flexibility in camera position. When the column is returned to the standard vertical orientation, it's unique design positions it back in the center of the main casting ensuring perfect center of gravity and balance.

(continued on back page)

